

# H, K, P-019'S

The H, K, P019's can go on your hammer 1 of 2 ways depending on the crosshead position on your pitman, and your die spacing. Pictured, are both ways they can go with the oil holes still in the upright position. Just by changing between those 2 ways you can either increase or decrease die spacing without changing your crosshead position!

